HOME
DECORATORS
COLLECTION

BF-25064 WIDE BASE WITH DRAWER AND TWO DOORS

INV#13632

ASSEMBLY INSTRUCTIONS

Made In China

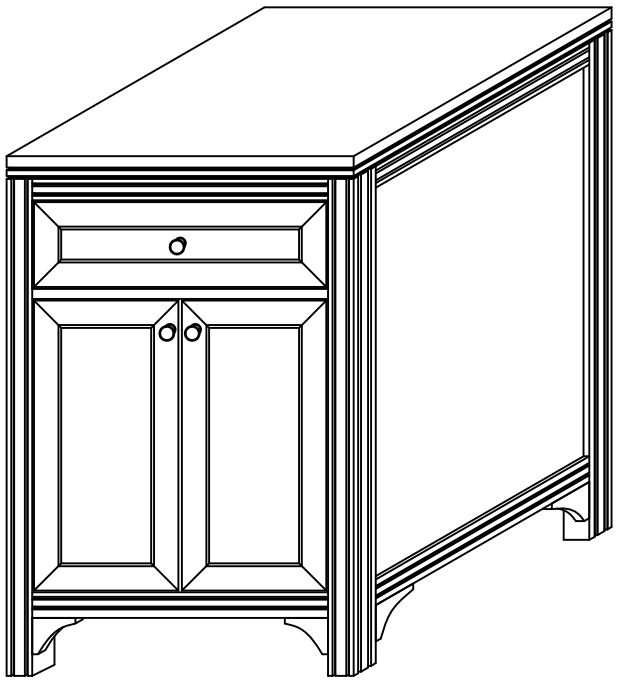

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC
D ADORNING PANEL-1PC	E  ACROSS PANEL-1PC	F  BOTTOM PANEL-1PC
G  LEFT DOOR-1PC	H  RIGHT DOOR-1PC	I 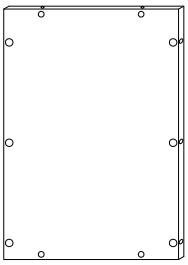 BACK PANEL-1PC
J 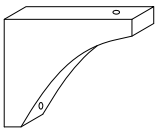 PANELS-2PCS	K  DRAWER PANEL FRONT-1PC	L 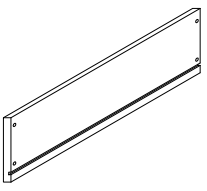 LEFT DRAWER PANEL SIDE -1PC

M 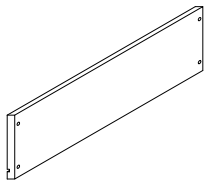 RIGHT DRAWER PANEL SIDE-1PC	N DRAWER PANEL BACK-1PC	O 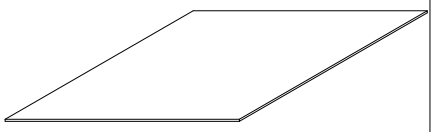 DRAWER PANEL BOTTOM-1PC
P  SHELF-1PC	Q 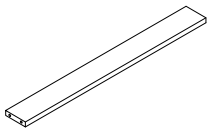 DRAWER SUPPORT PANEL-1PC	R 7mm× 5/8"  SCREWS-2PCS
S 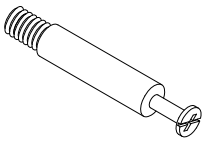 CAM-BOLTS-20PCS	T  CAM-LOCKS-20PCS	U 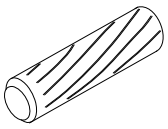 DOWELS-2PCS
V 8mm× 1" 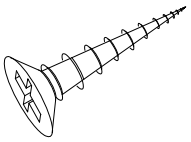 SCREWS-7PCS	W 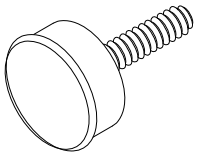 FEET-4PCS	X 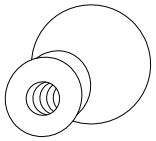 KNOB-3PCS
Y 8mm× 5/8" 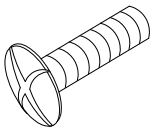 SCREWS-3PCS	Z 6mm× 1" 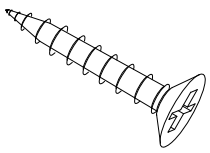 SCREWS-12PCS	A1 6mm× 1/2" 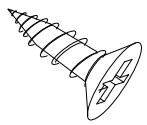 SCREWS-36PCS

B1 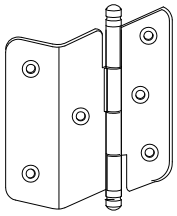 HINGES-4PCS	C1  LARGE MAGNET-1PC	D1  FEMALE MAGNETS-2PCS
E1 5mm× 1/2" 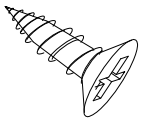 SCREWS-2PCS	F1  SHELF SUPPORTS-4PCS	G1 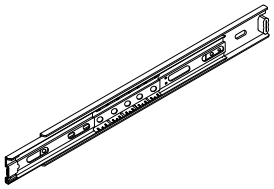 OUTER SLIDERS-2PCS
H1 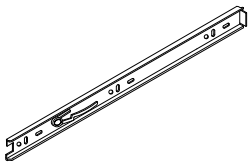 INNER SLIDES-2PCS	I1 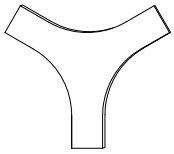 CAM-TOOL-1PC	J1 7mm× 7/8"  SCREWS-4PCS
K1  GECKOS-4PCS	L1 6mm× 3/4" 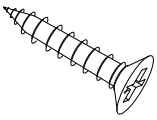 SCREWS-4PCS	M1 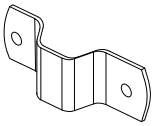 HOOKS-4PCS
N1 PLASTIC BELTS-2PCS		

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

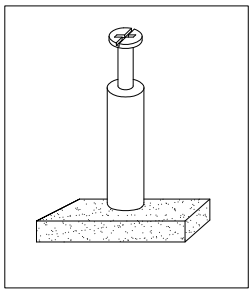

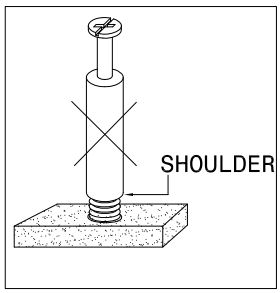

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

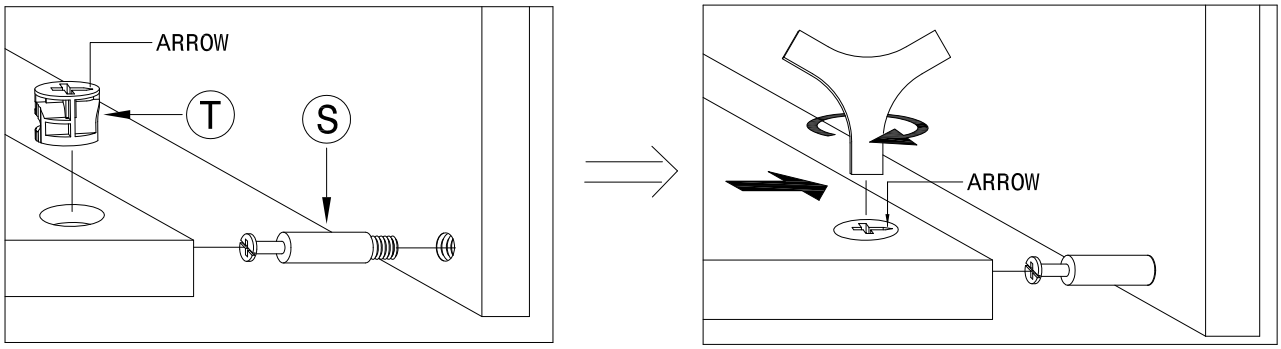

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

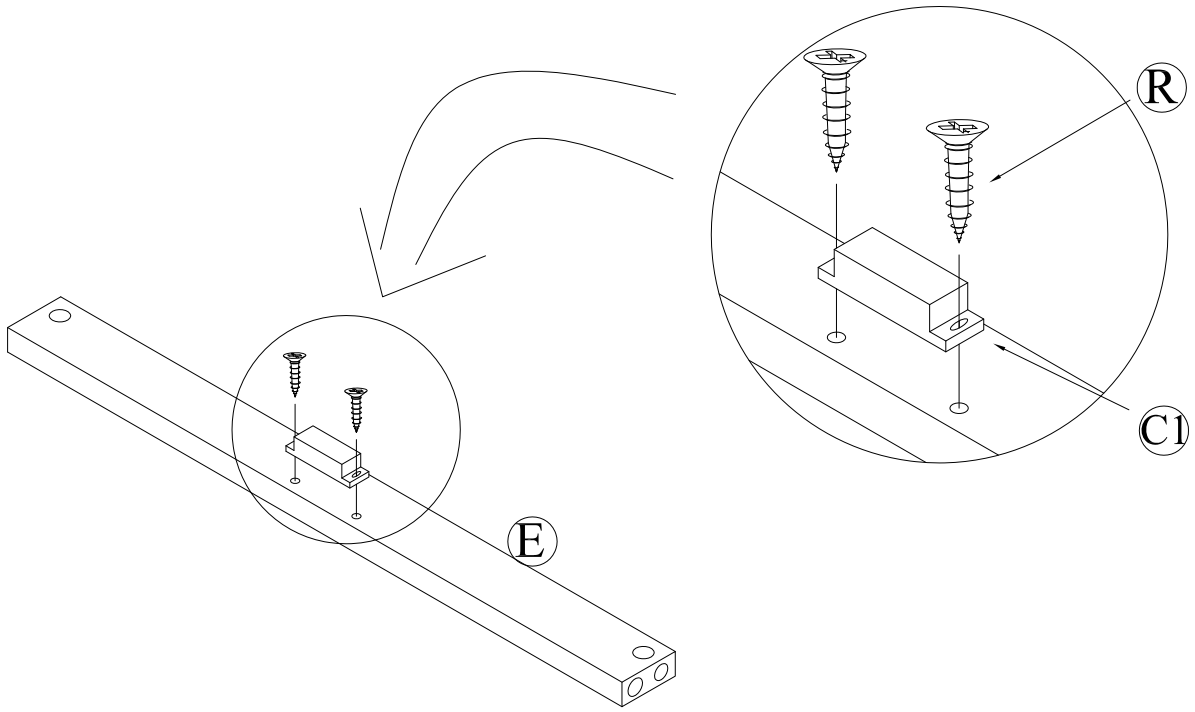

1). ASSEMBLE THE BIG MAGNET(C1).

- ATTACH THE LARGE MAGNET(C1) TO ACROSS PANEL(E) USING 2 SCREWS(R).

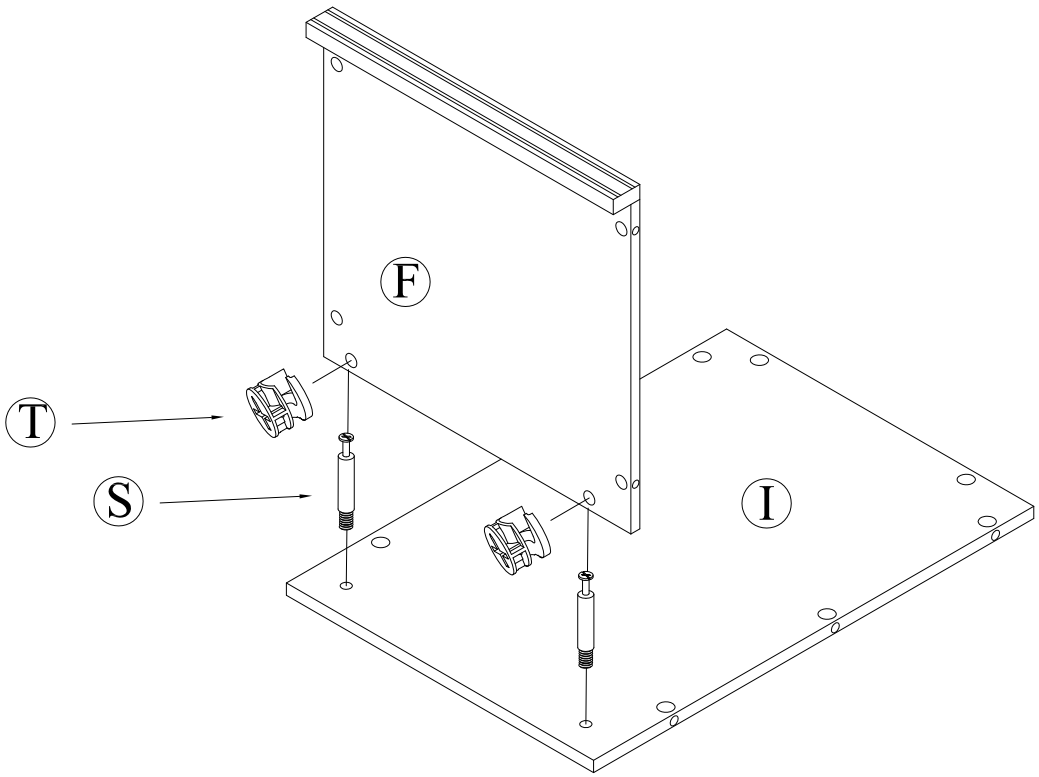

2). ASSEMBLE THE BOTTOM PANEL(F).

- ROTATE 2 CAM-BOLTS(S) INTO THE HOLES IN THE BACK PANEL(I).
- PLACE CAM-BOLTS(S) INTO THE HOLES IN THE PANEL(F) AND ATTACH USING 2 CAM-LOCKS(T).

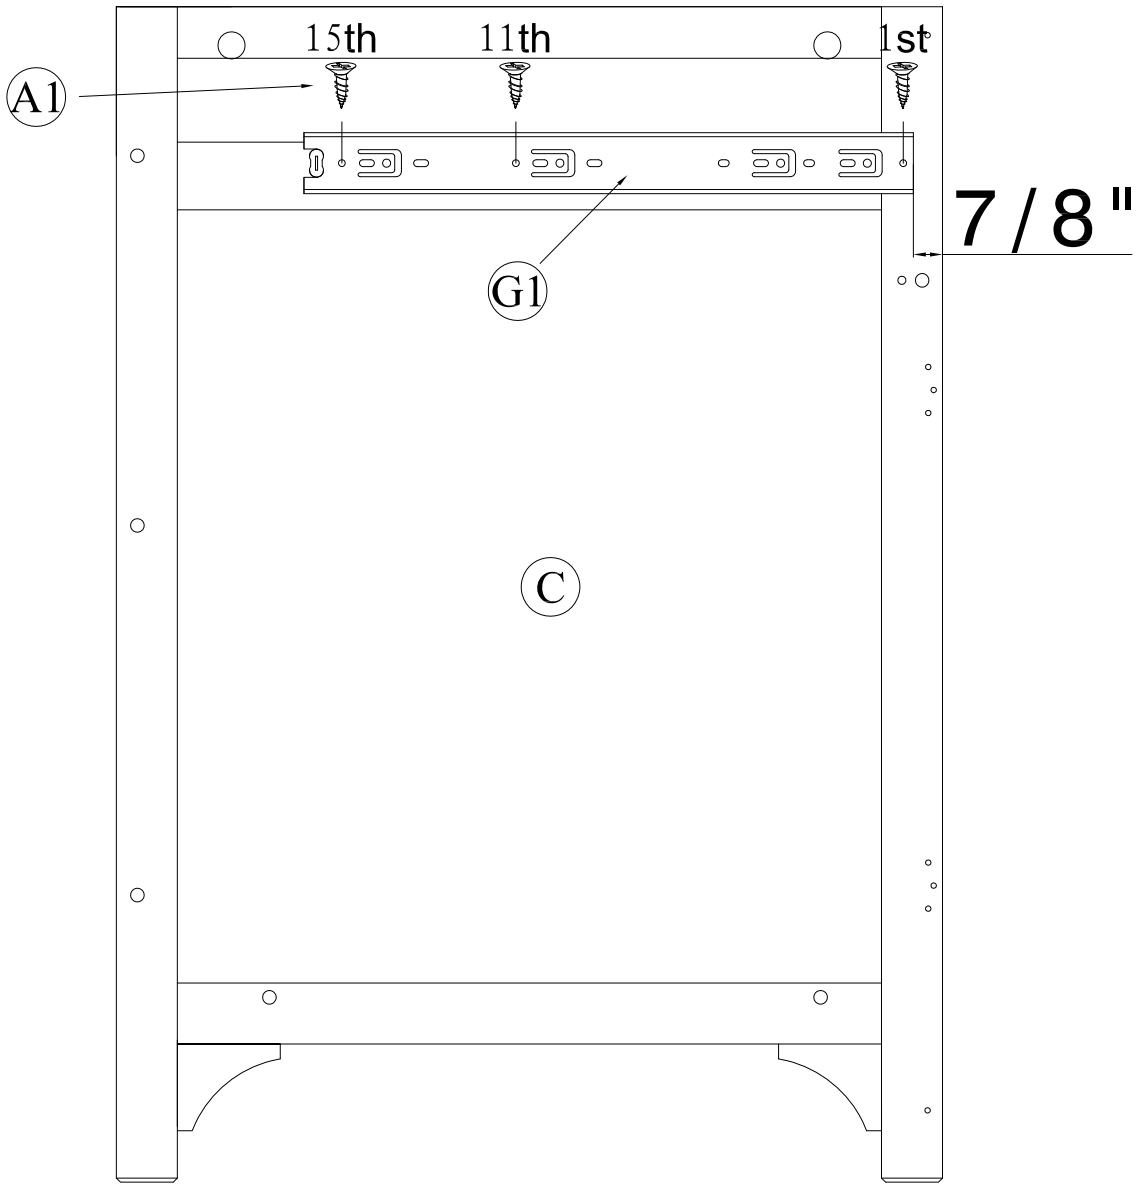

3). ASSEMBLE THE OUTER SLIDER(G1).

● ATTACH THE OUTER SLIDERS(G1) TO RIGHT SIDE PANEL(C) USING 3 SCREWS(A1).

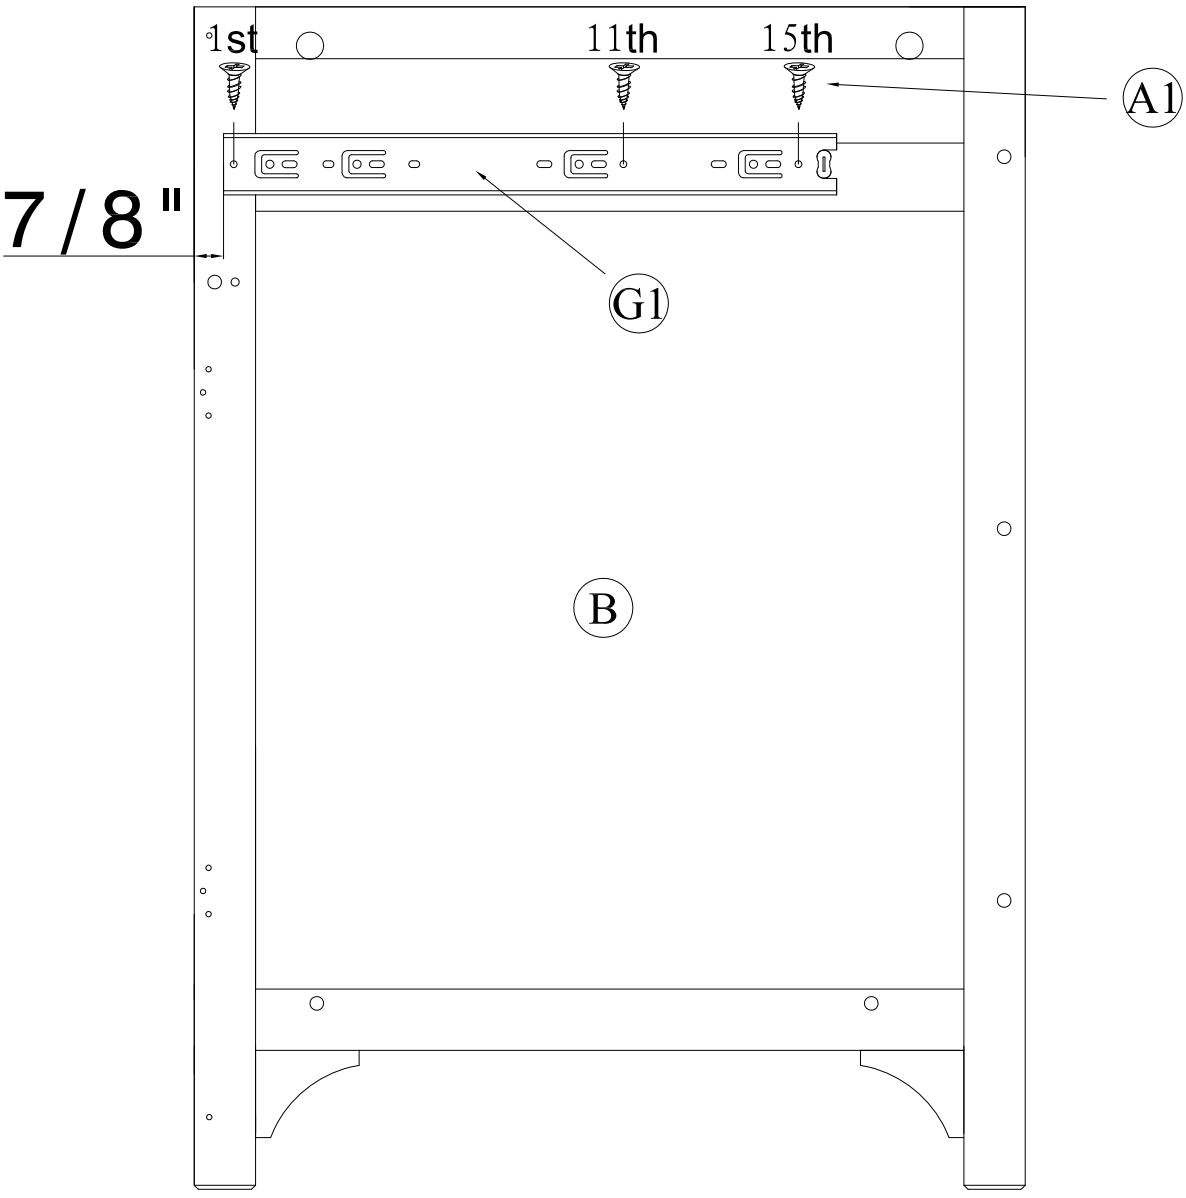

4). ASSEMBLE THE OUTER SLIDER(G1).

- ATTACH THE OUTER SLIDERS(G1) TO LEFT SIDE PANEL(B) USING 3 SCREWS(A1).

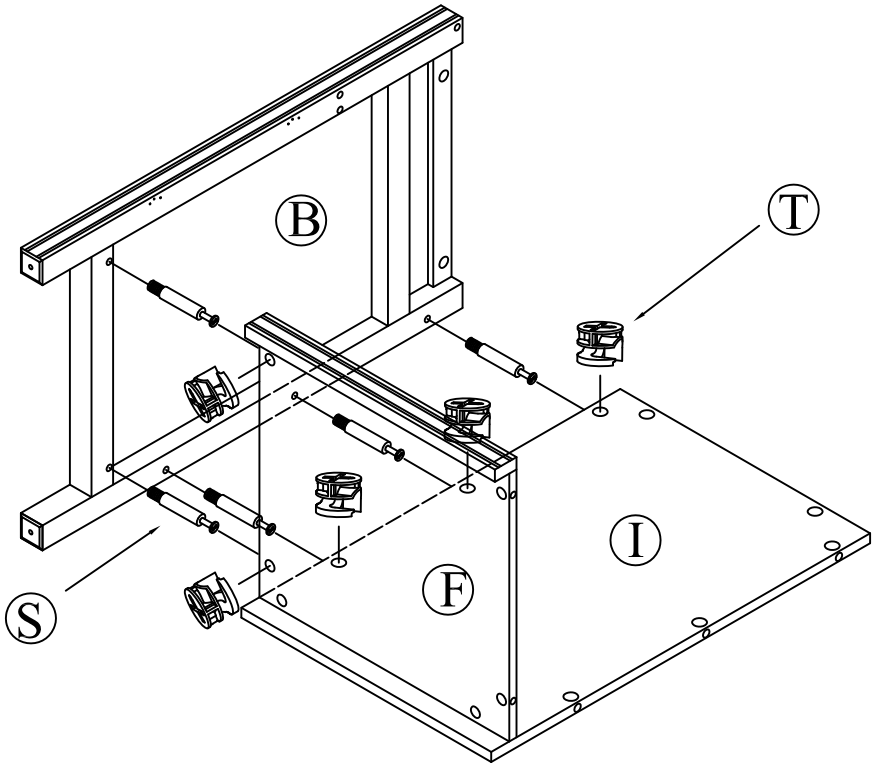

5). ASSEMBLE THE LEFT SIDE PANEL(B).

- ROTATE 5 CAM-BOLTS(S) INTO THE HOLES IN THE LEFT SIDE PANEL(B).
- PLACE CAM-BOLTS(S) INTO THE HOLES IN THE PANEL(F/I) AND ATTACH USING 5 CAM-LOCKS(T).

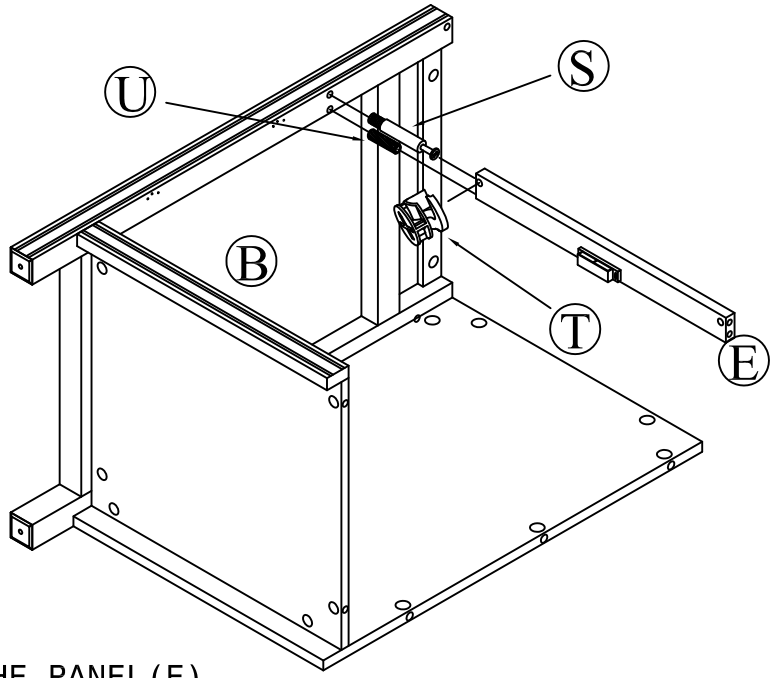

6). ASSEMBLE THE PANEL(E).

- ROTATE THE 1 CAM-BOLT(S) AND INSERT 1 DOWEL(U) INTO THE HOLE IN THE LEFT SIDE PANEL(B).
- PLACE CAM-BOLT(S) INTO THE HOLE IN THE PANEL(E) AND ATTACH USING 1 CAM-LOCK(T).

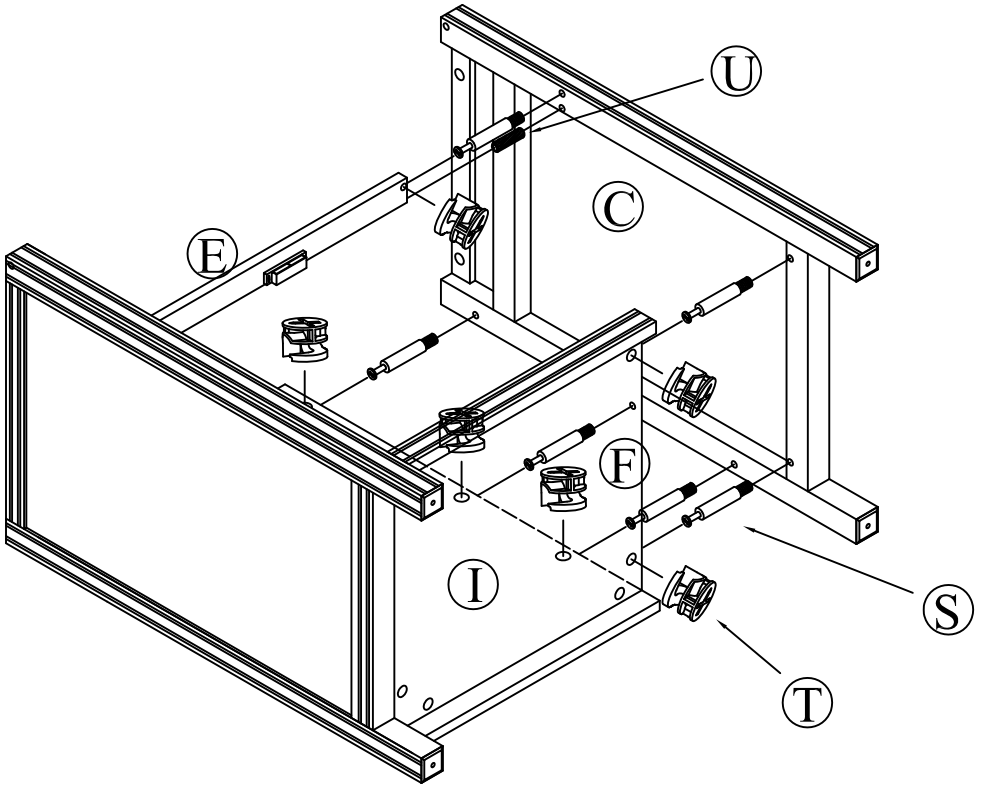

7). ASSEMBLE THE RIGHT SIDE PANEL(C).

- ROTATE 6 CAM-BOLTS(S) AND INSERT 1 DOWEL(U) INTO THE HOLES IN THE RIGHT SIDE PANEL(C).
- PLACE CAM-BOLTS(S) INTO THE HOLES IN THE PANEL(E/F/I) AND ATTACH USING 6 CAM-LOCKS(T).

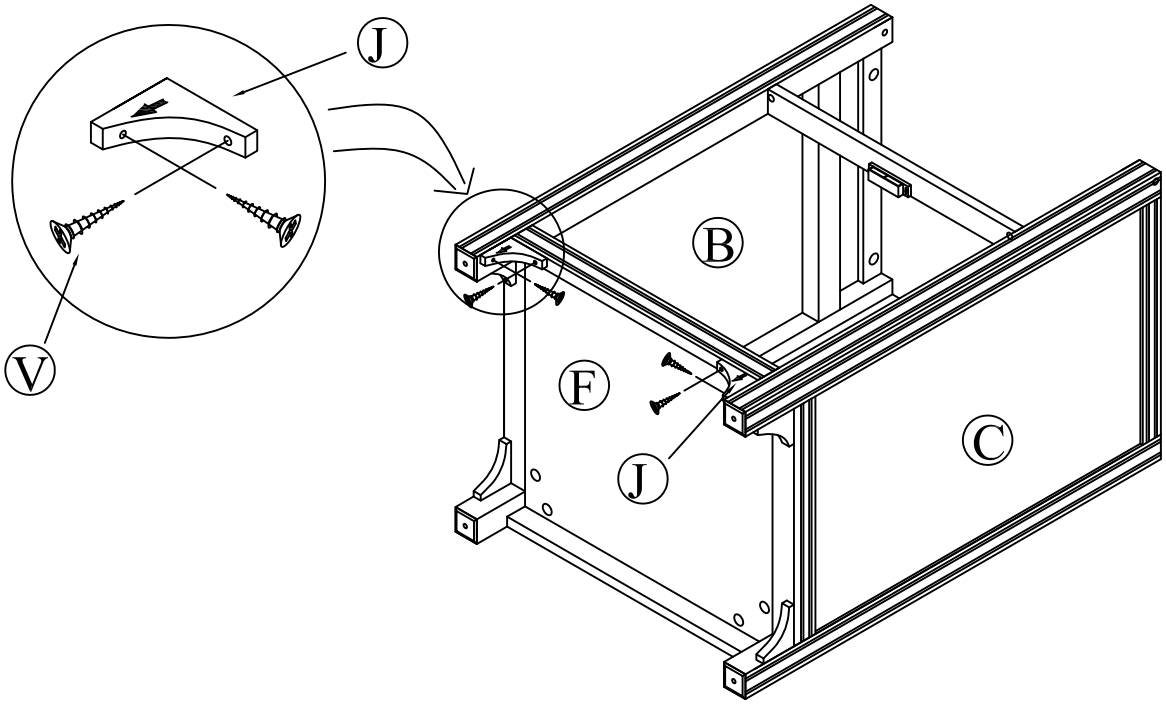

8). ASSEMBLE THE PANELS(J).

- ATTACH THE PANELS(J) TO PANEL(B/C/F) USING 4 SCREWS(V).

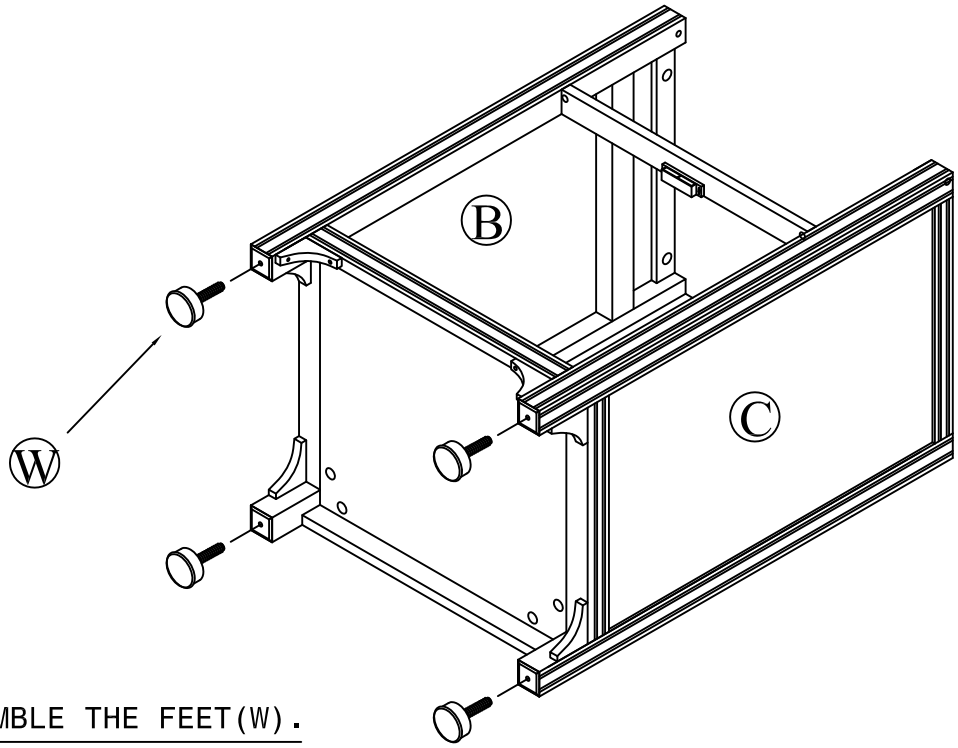

9). ASSEMBLE THE FEET(W).

- ROTATE 4 FEET(W) INTO THE HOLES IN THE PANEL(B/C).

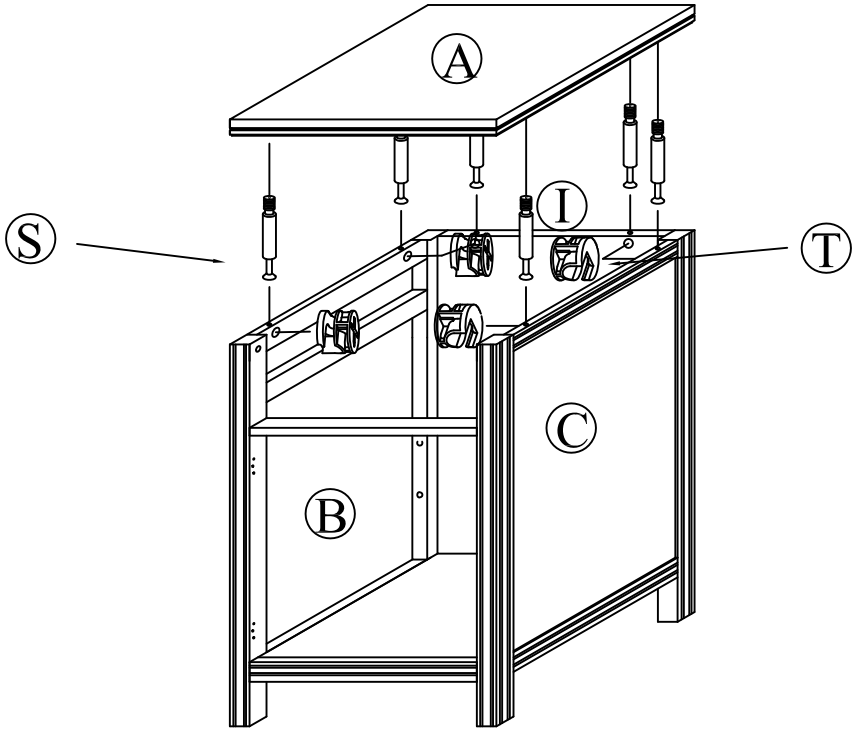

10). ASSEMBLE THE TOP PANEL(A).

- ROTATE 6 CAM-BOLTS(S) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(S) INTO THE HOLES IN THE PANEL(B/C/I) AND ATTACH USING 6 CAM-LOCKS(T).

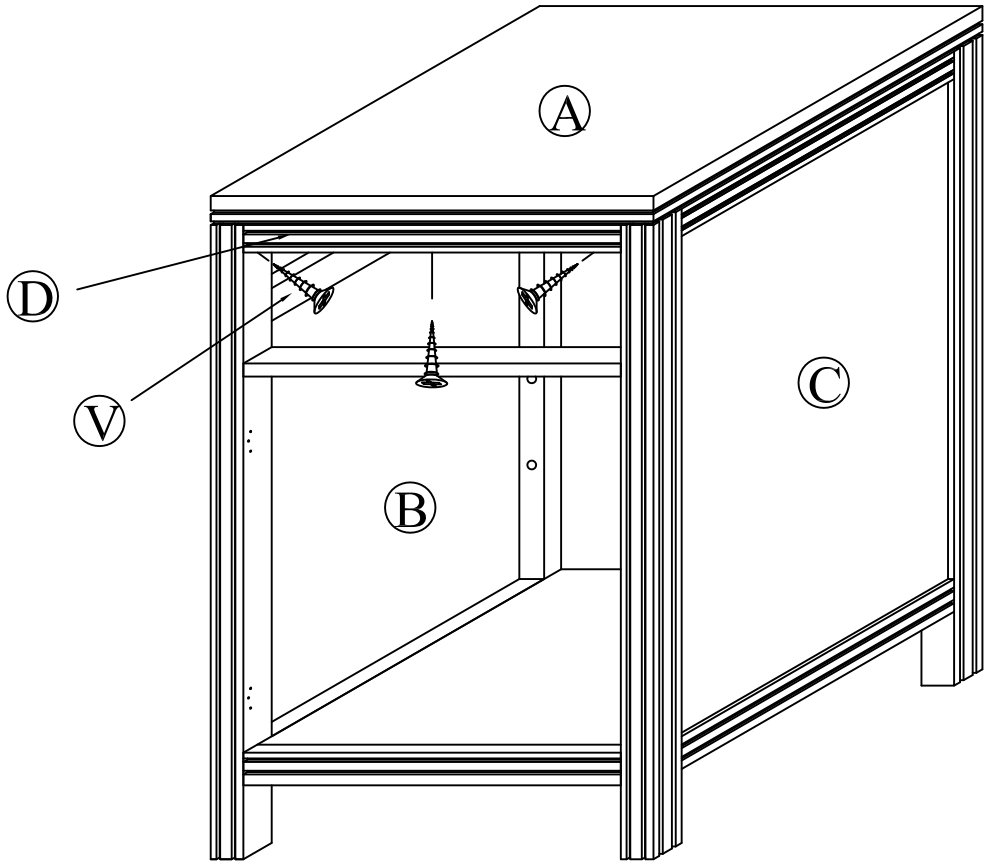

11). ASSEMBLE THE ADORNING PANEL(D).

- ATTACH THE ADORNING PANEL(D) TO PANEL(A/B/C) USING 3 SCREWS(V).

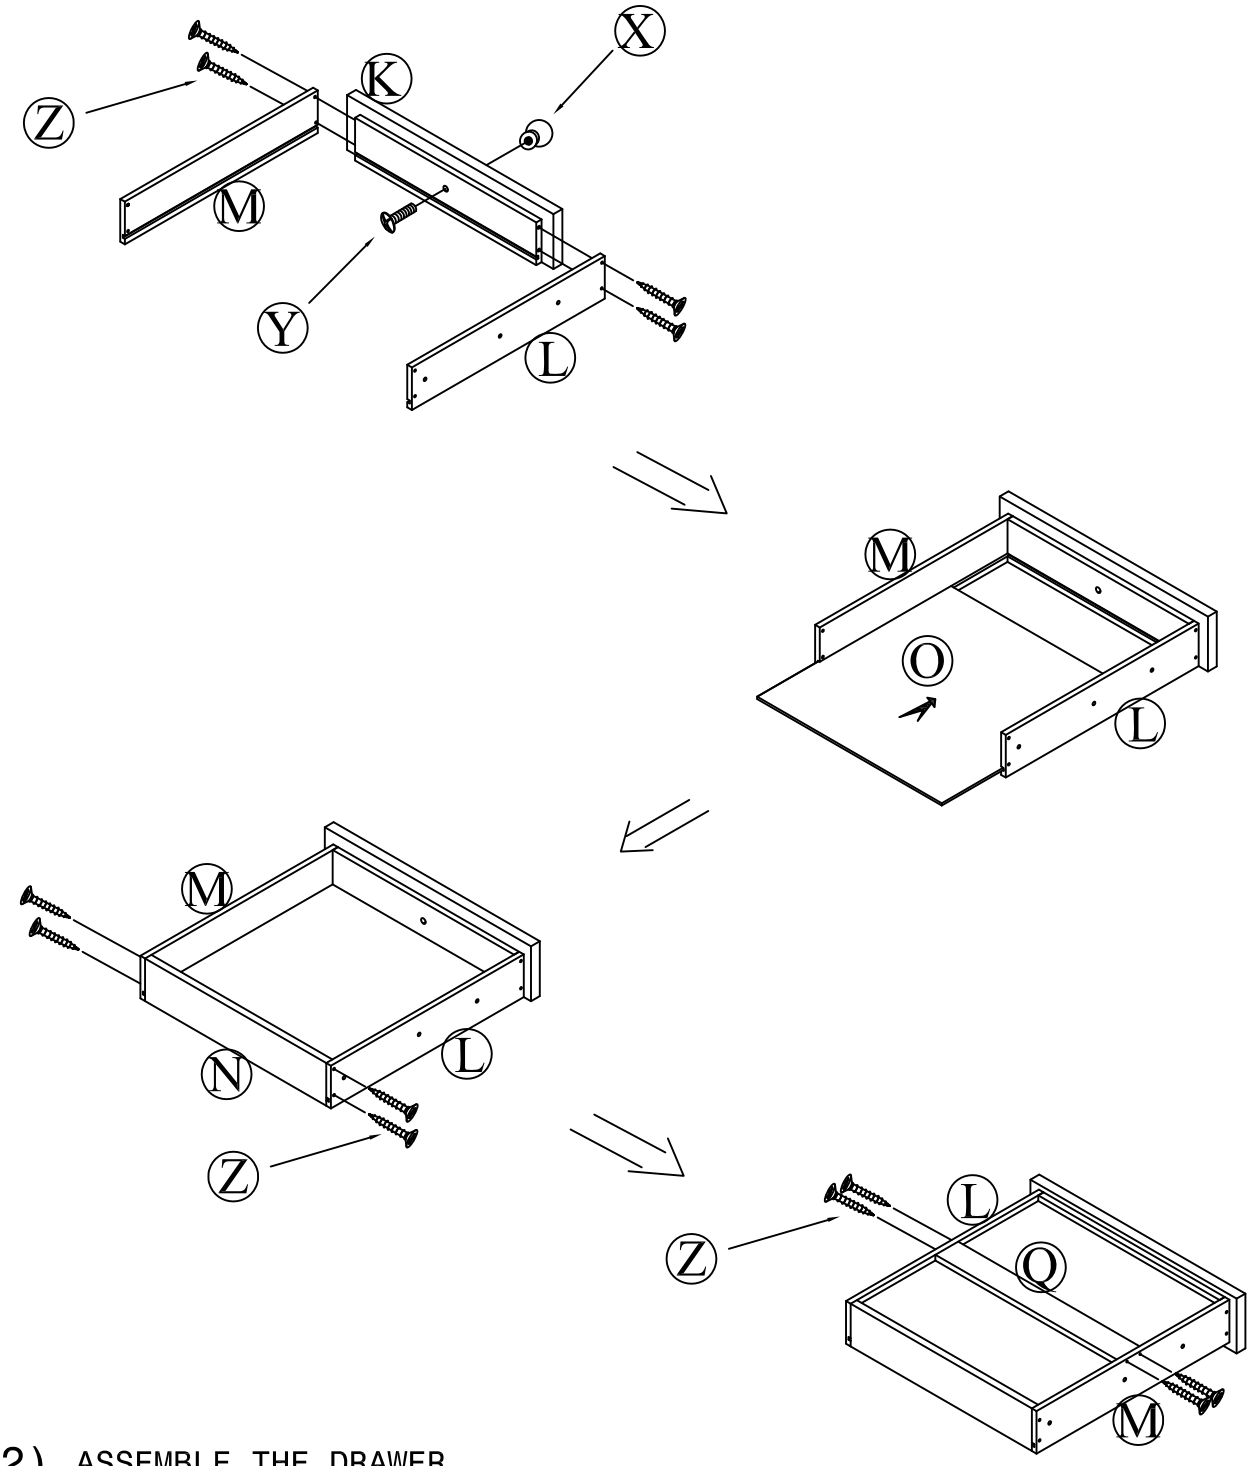

12). ASSEMBLE THE DRAWER.

- ATTACH DRAWER PANEL SIDE(L/M) TO DRAWER PANEL FRONT(K) USING 4 SCREWS(Z).
- ATTACH THE KNOB(X) TO DRAWER PANEL FRONT(K) USING 1 SCREW(Y).
- INSERT DRAWER PANEL BOTTOM(O) INTO THE SLOTS IN THE DRAWER PANEL SIDES(L/M).
- ATTACH DRAWER PANEL BACK(N) BETWEEN LEFT DRAWER PANEL SIDE(L) AND RIGHT DRAWER PANEL SIDE(M) USING 4 SCREWS(Z).
- ATTACH DRAWER SUPPORT PANEL(Q) BETWEEN PANEL SIDE(L/M) USING 4 SCREWS(Z).

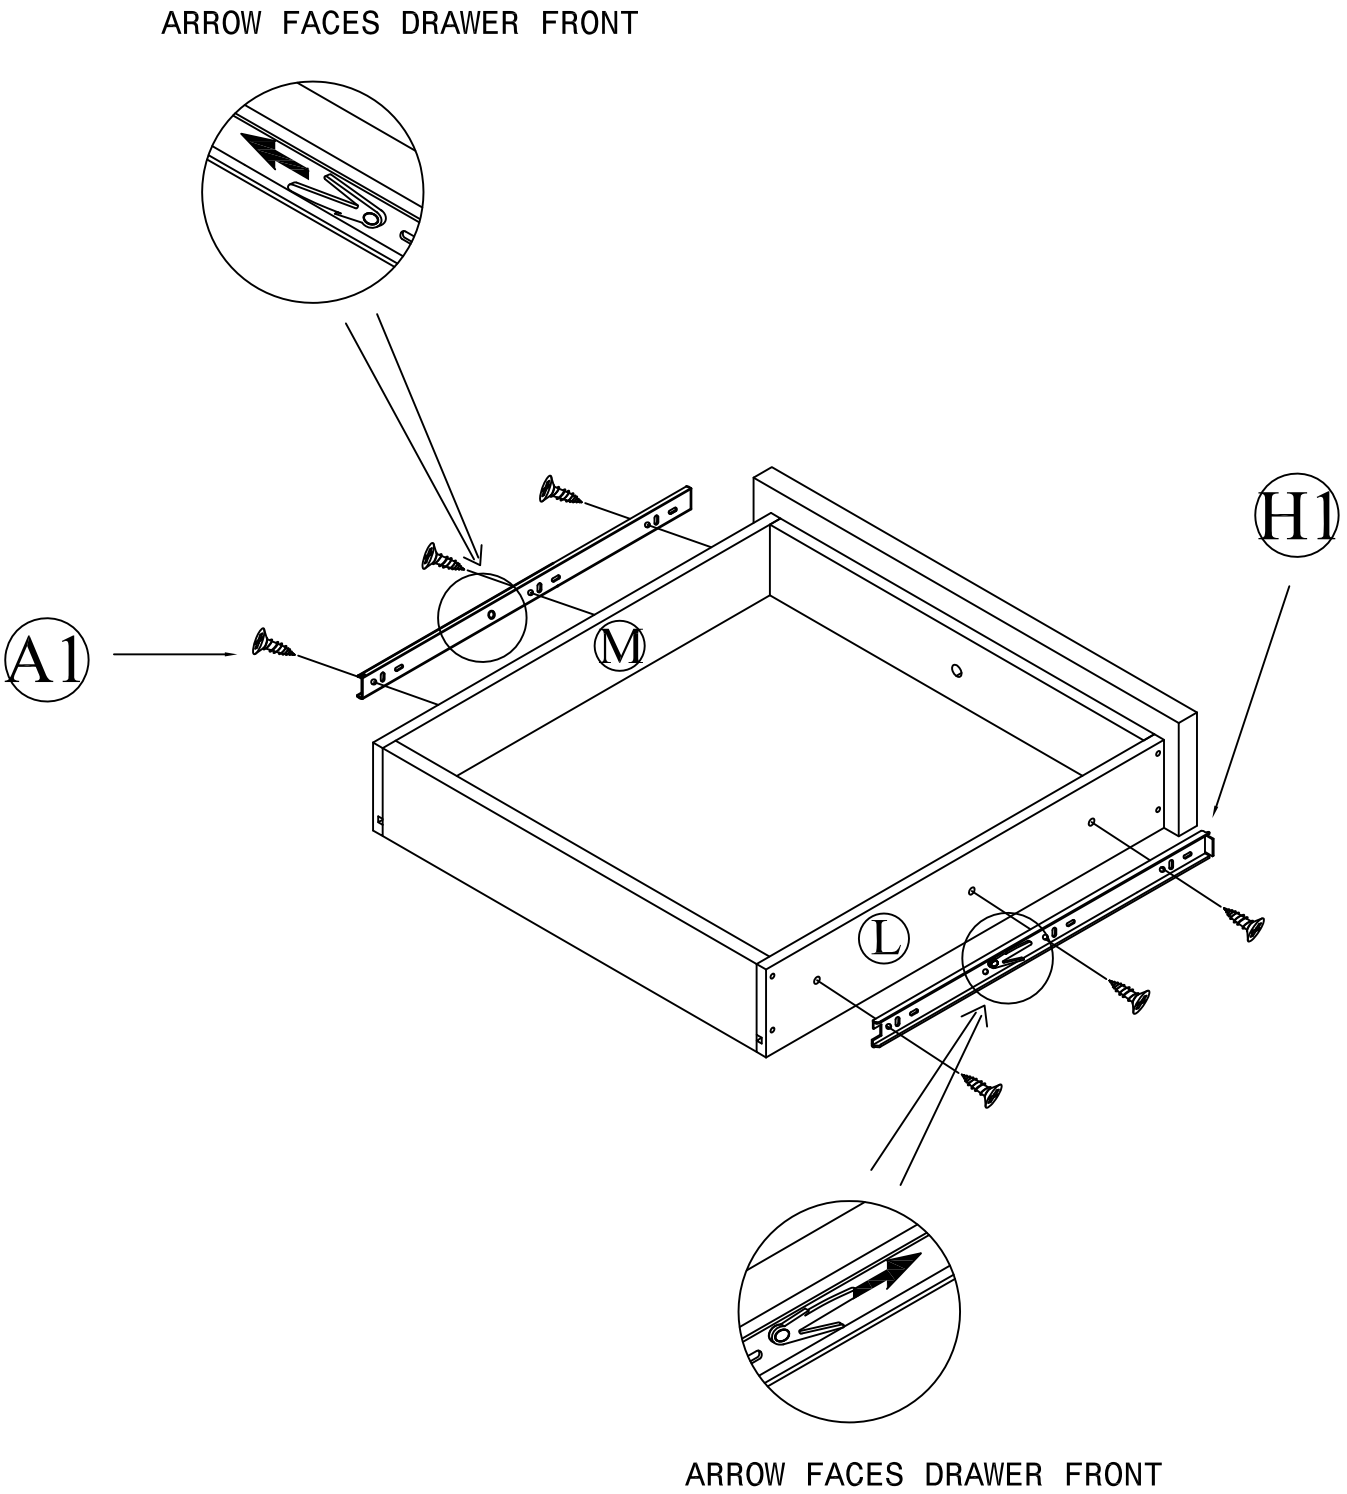

13). ASSEMBLE THE INNER SLIDERS(H1).

- ATTTACH 2 INNER SLIDERS(H1) TO PANEL(L/M) USING 6 SCREWS(A1).

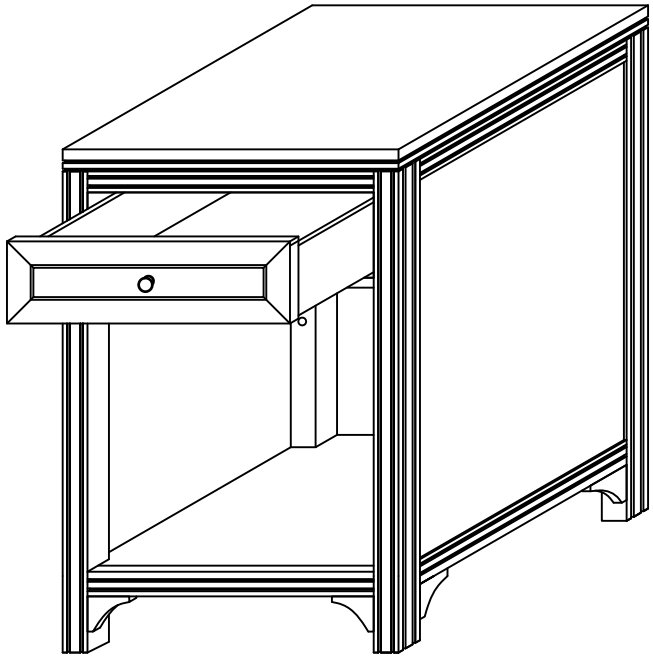

14). ASSEMBLE THE DRAWER.

- INSERT THE DRAWER INTO THE SLIDER.

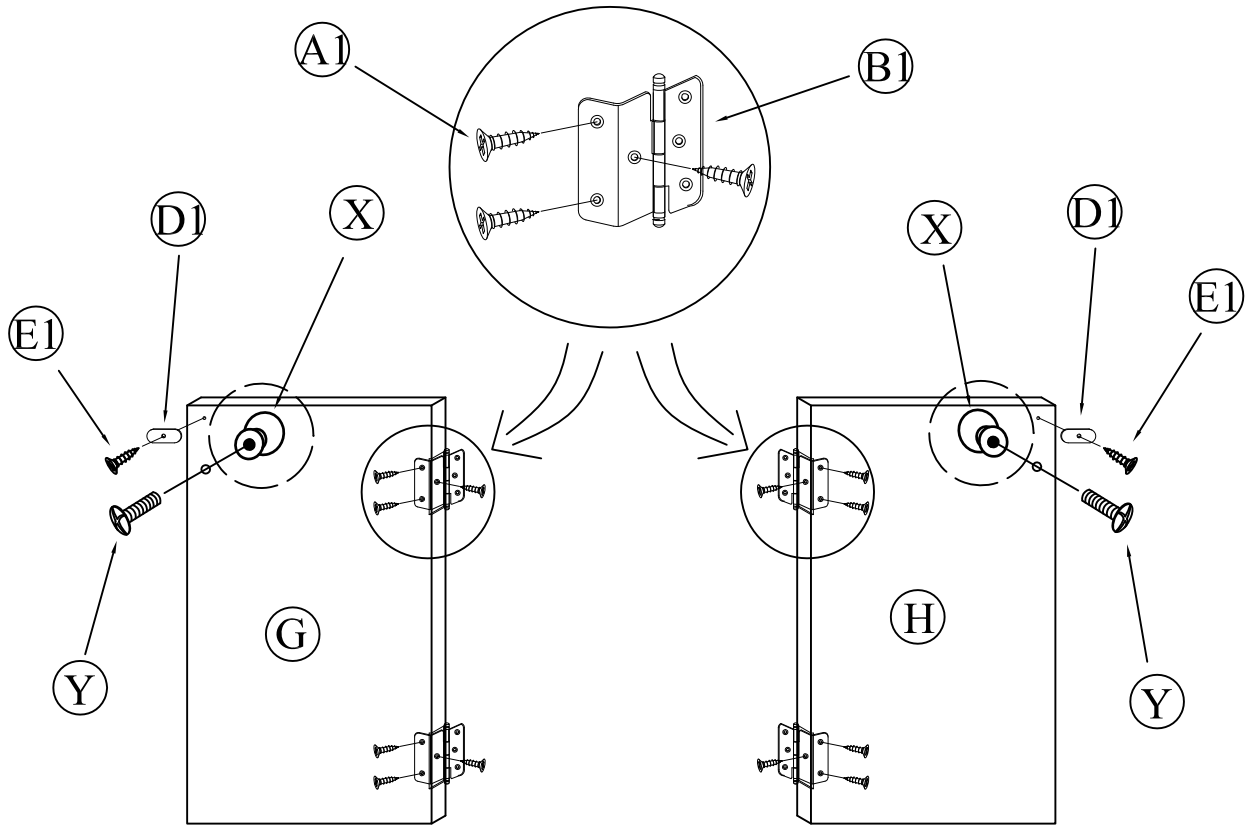

15). ASSEMBLE THE DOOR(G/H).

- ATTACH 2 KNOBS(X) TO DOOR(G/H) USING 2 SCREWS(Y).
- ATTACH 2 FEMALE MAGNETS(D1) TO DOOR(G/H) USING 2 SCREWS(E1).
- ATTACH 4 HINGES(B1) TO DOOR(G/H) USING 12 SCREWS(A1).

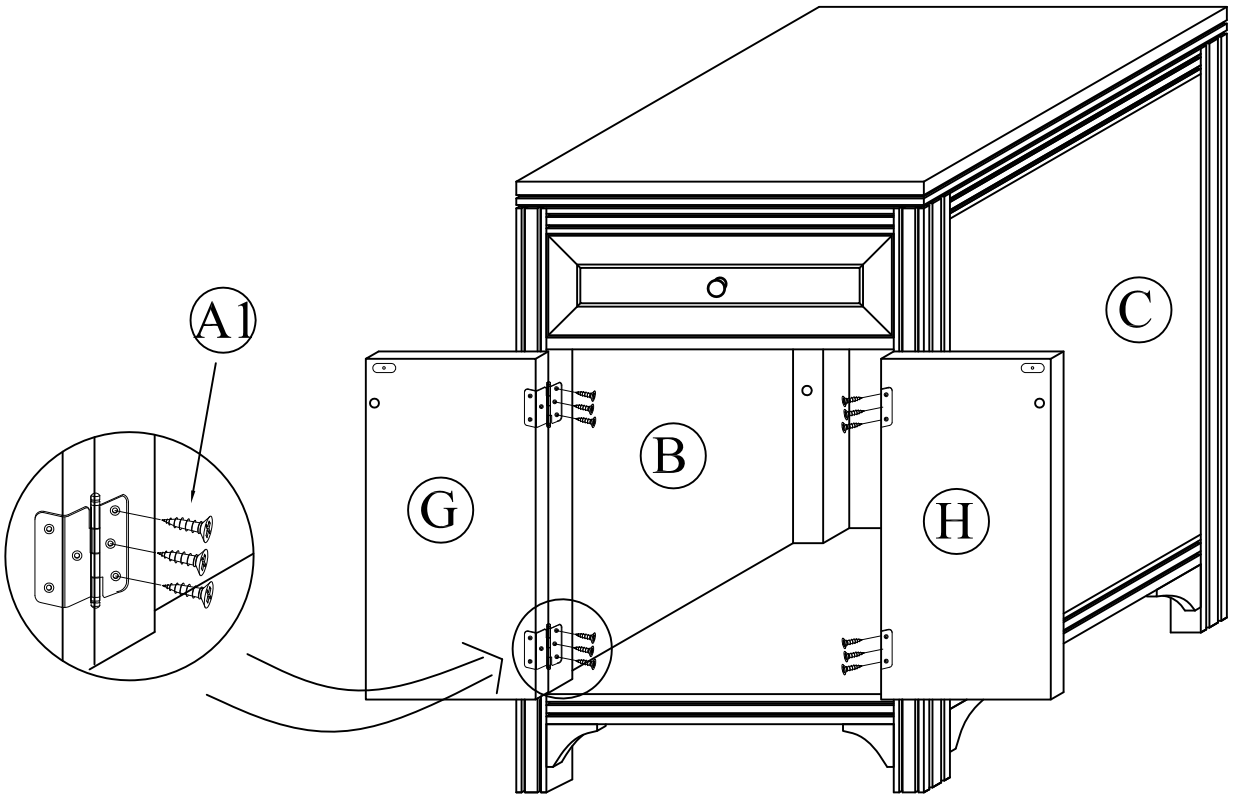

16). ASSEMBLE THE DOOR(G/H).

- ATTACH THE DOOR(G/H) TO SIDE PANEL(B/C) USING 12 SCREWS(A1).

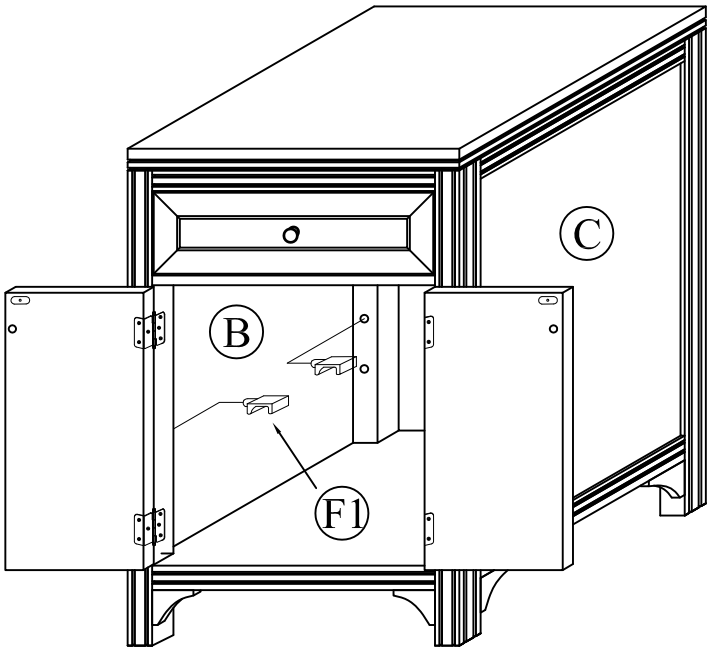

17). ASSEMBLE THE SHELF SUPPORTS(F1).

- INSERT THE 4 SHELF SUPPORTS(F1) INTO THE HOLES IN THE SIDE PANEL(B/C).

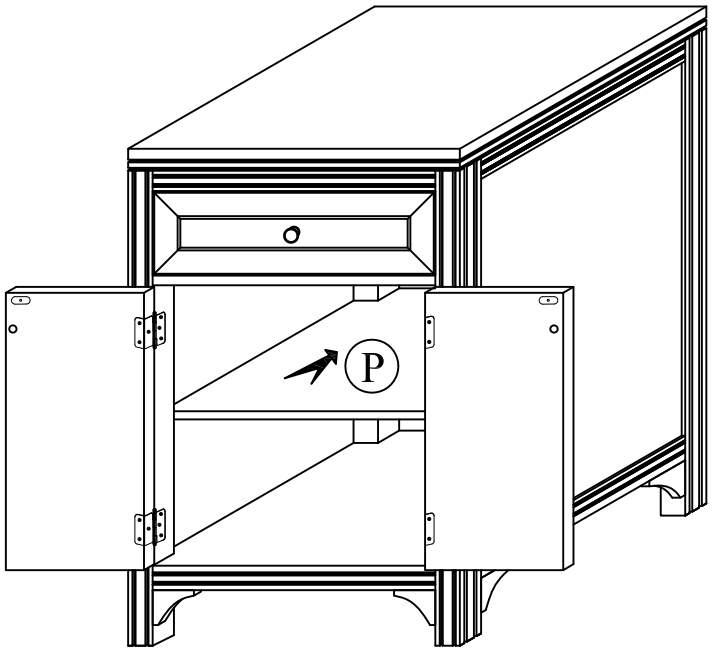

18). ASSEMBLE THE SHELF(P).

- PLACE THE SHELF(P) ONTO THE SHELF SUPPORTS(F1).

Warning

The anti-tip hardware must be used as part of assembly!

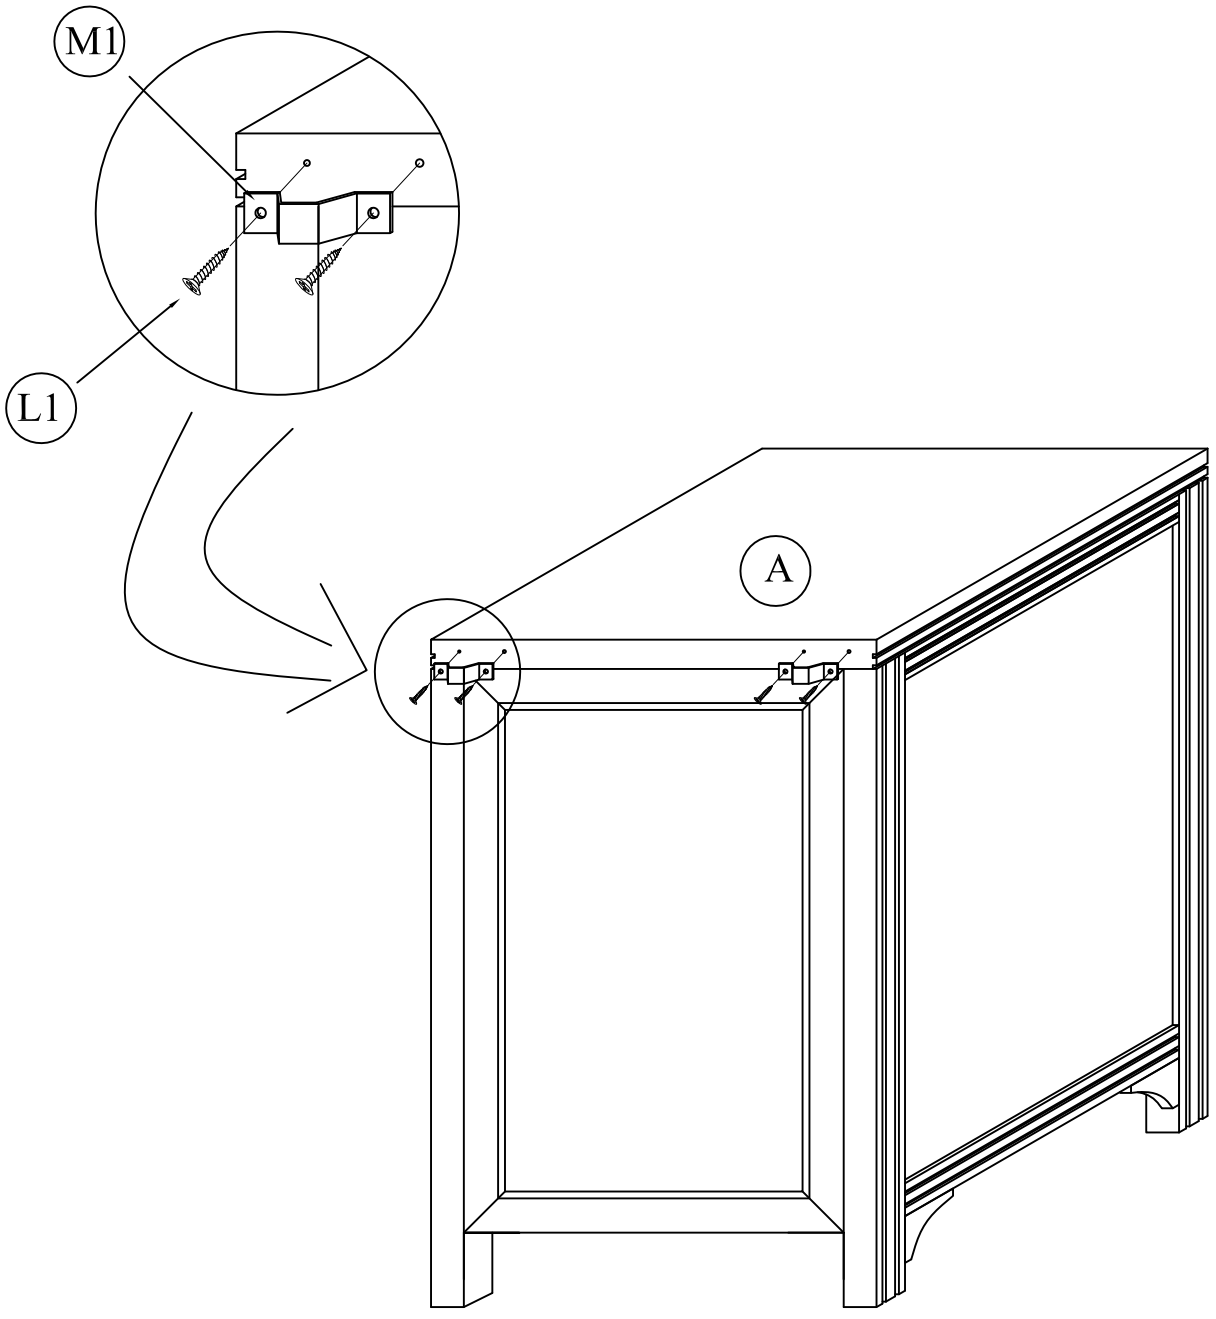

19). ASSEMBLE THE HOOKS(M1).

- ATTACH 2 HOOKS(M1) USING 4 SCREWS(L1) IN THE PREDRILLED HOLES OF REAR TOP PANEL(A).

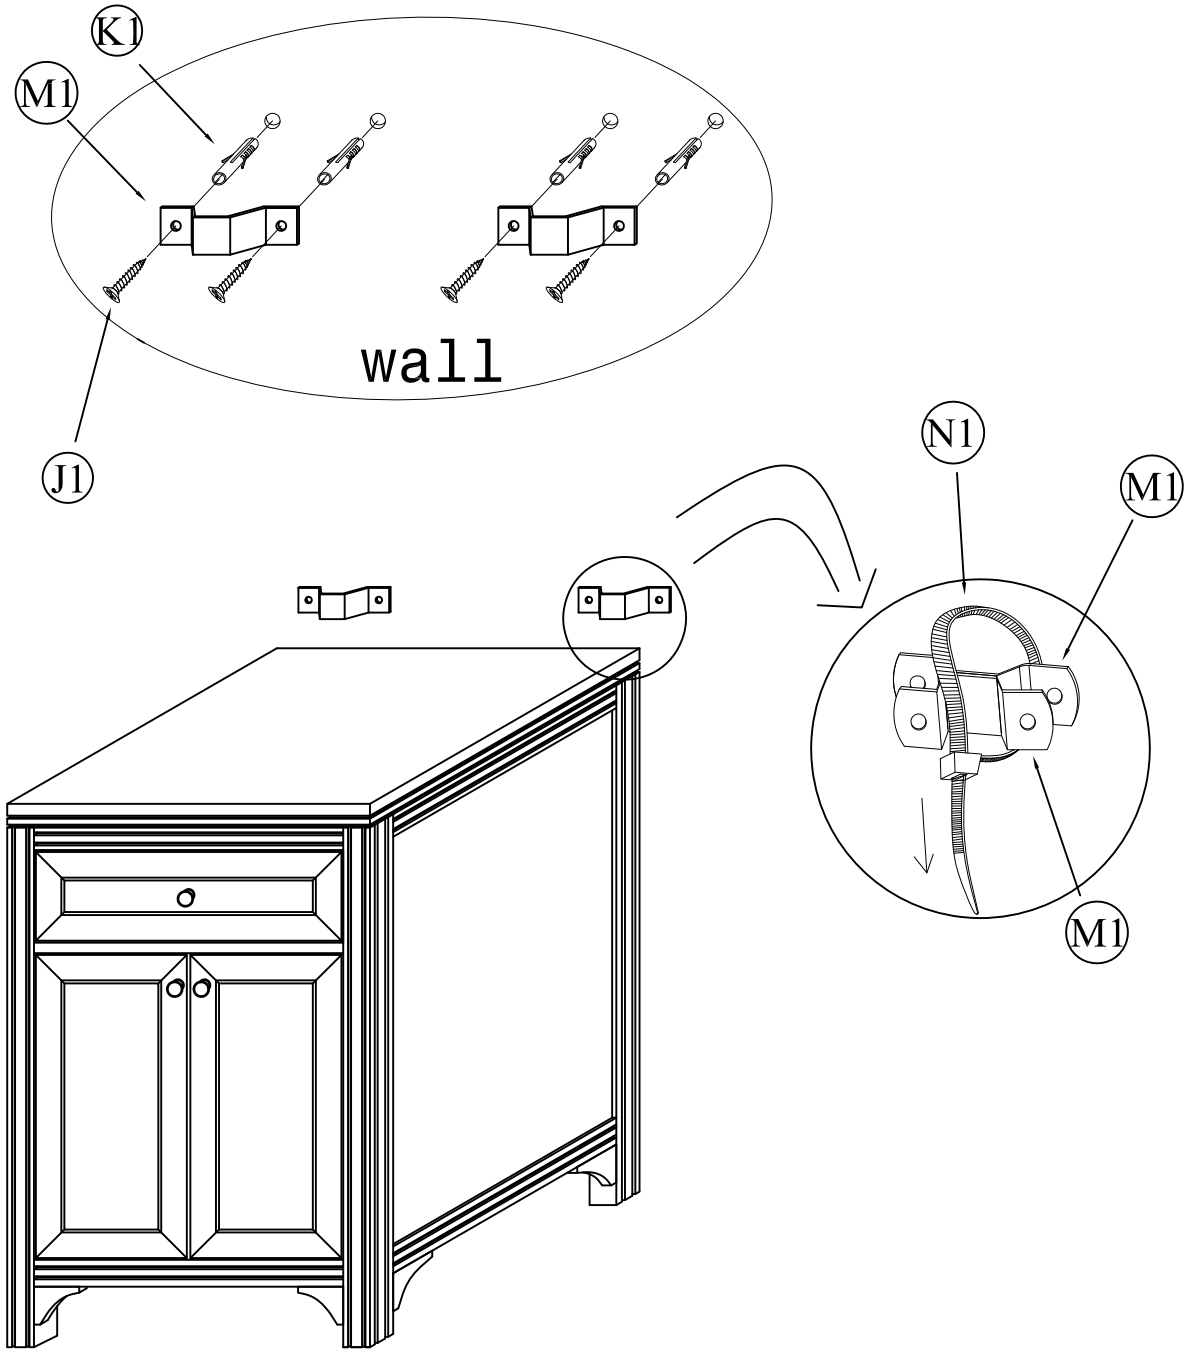

20). ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO THE WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLES DISTANCE AND HEIGHT.
- PUT 4 GECKOS(K1) INTO HOLES IN THE WALL, AND ROTATE 4 SCREWS(J1) INTO THE GECKOS(K1).
- CONNECT THE TWO HOOKS(M1) WITH A PLASTIC BELT(N1).